LG

Life's Good

AX4750

Get Started Guide

- Touch2Talk
- Voice Command & Driving Mode
- Powerful Speakerphone
- Axcess Mobile Web

www.LGUSA.com

AX4750
DUAL-BAND/TRI-MODE

PHONE OVERVIEW

MAIN MENU

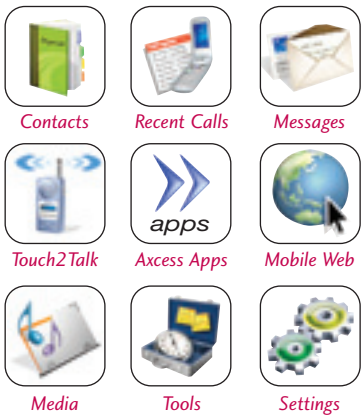

TOUCH2TALK FEATURES

USING TOUCH2TALK

Making a T2T Alert

1. From the main screen, press and hold the **T2T Key**.
2. Use the Navigation Key to highlight a name from the contacts list, and push **Left Soft Key** for **Alert**.
3. Select **Yes**. The receiver will hear the incoming alert tone along with the alert screen.
4. If the receiver accepts, the "connected to" screen is shown and you will hear the voice of the other party.

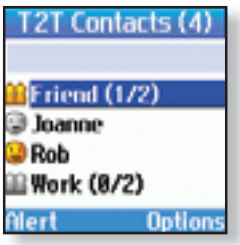

Making a T2T Call

The call is connected without the incoming call alert. The voice of the caller is immediately heard.

1. From the main screen, press and hold the **T2T Key**.
2. Use the Navigation Key to highlight a name from the contacts list.
3. Press and hold the **T2T Key**. Begin speaking after you hear the T2T talk tone.
4. Release the **T2T Key**. The receiver will hear the floor available tone.

Making a T2T Group Call

Using this function, you can make a multiparty call with all the members of a T2T Group.

1. From the main screen, press and hold the **T2T Key**.
2. Use the Navigation Key to highlight a group from the contacts list.
3. Press and hold the **T2T Key**. Begin speaking after you hear the T2T talk tone.
4. Release the **T2T Key**. The receivers will hear the floor available tone.

Receiving a T2T Alert

When you receive a T2T alert, the incoming alert tone and screen appears.

1. Choose **Accept** or **Ignore**.
2. If accepted, press and hold the **T2T Key** to make a T2T call.

VOICE COMMAND FEATURES

Activating Speakerphone

1. From the main screen, press and hold the **Speakerphone Key** and "**Speaker On**" will appear on the screen.
2. To deactivate, press and hold the key again and "**Speaker Off**" will appear on the screen.

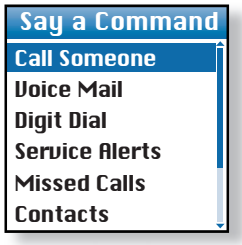

Using Voice Commands

1. From the main screen, press the **Voice Command Key** on the side of the phone.
2. You will be asked to "Please Say a Command." Clearly speak a command from the list: **Call Someone**, **Voice Mail**, **Digit Dial**, **Service Alerts**, **Missed Calls**, **Contacts**, **Driving**, **Announce**, **Time and Date** or **Phone Status**.

Call Someone: to call a contact from your phone book.

Voice Mail: to call your voice mail.

Digit Dial: to dial a phone number by speaking the digits.

Service Alerts: to check missed calls, voice mails or new messages.

Missed Calls: to check your missed calls.

Contacts: to read, create or erase a contact.

Driving: to activate Driving Mode.

Announce: to turn on audio confirmation of menu navigation.

Time and Date: to hear the current time and date.

Phone Status: to hear status on battery usage, signal strength, service mode, GPS location and roaming.

AX4750

DOWNLOADING AXCESS℠ CONTENT

The new AX4750 by LG can store downloaded content from AXCESS℠, a technology and service that allows you to download and use applications, games, ringtones and more on your phone.

Downloading New Content From Axcess℠

1. From main screen, press the **Axcess Shop** icon (right) on the Navigation Key and press **OK**.
2. Once the Axcess Shop page is displayed, select the shopping cart icon. Choose from ringtones, wallpapers, games, e-mail and more.

ACCESSING THE WEB

1. From the main screen, press the **Web** icon (left) on the Navigation Key.
2. Once the web browser is launched, you will see the Home Page.
3. You can end a browser session by pressing **END** at any time.

MESSAGING

Allows you to send a text message with or without graphics and sounds to an e-mail address or phone number.

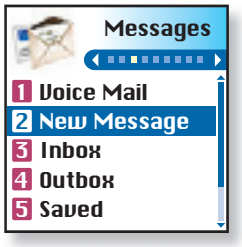

Sending a SMS or EMS Message

1. From the main screen, press the **Messages** icon (down) on the Navigation Key and select **New Message** (**2**).
2. Press **Left Soft Key** for **Contacts** to enter a recipient from the **Contacts** (**1**), **Recent Calls** (**2**) or **Recent Addresses** (**3**) menu, or use the key pad to enter a new e-mail address or phone number. Up to 10 recipients can be added.
3. Select **Message** and press **OK**.
4. Enter the message (up to 160 characters) using the keypad and press **OK**.
5. To add an attachment press **Right Soft Key** for **Options** and select from **Insert Quick-Text** (**1**), **Insert Object** (**2**), **Format Text** (**3**), **Save Quick-Text** (**4**) or **Insert Signature** (**5**) and press **OK**.
6. Press **Left Soft Key** for **Send**.

Note: The ability to send text messages or EMS text messages are subject to network service availability.

Changing the Wallpaper Image

1. From the **Settings** (**9**) menu, select **Display** (**2**).
2. Select **Screens** (**3**).
3. Select **Wallpaper** (**1**).
4. Press left or right on the Navigation Key to select the desired image from **Default**, **Downloaded** or **EMS** and press **OK** twice.

Changing the Call Ringer

1. From the **Settings** (**9**) menu, select **Sounds** (**1**).
2. Select **Ringers** (**1**).
3. Select either **Caller ID** (**1**), **No Caller ID** (**2**), or **Restricted Calls** (**3**).
4. Choose from the list of available default or downloaded ringers and press **OK**.

THE SCHEDULER

The Tools menu allows you to view the calendar, schedule an event, program your handset's alarm clock and view and compose memos on the notepad.

Scheduling an Event

1. From main screen, press the **Schedule** icon (up) on the Navigation Key.
2. Highlight the event date using your Navigation Key and press **Left Soft Key** for **Add**.
3. You may set the appropriate start and end times, content, voice memo, recurrence (if any) or alarm & ringer by scrolling to the corresponding field, and entering the desired information and pressing **OK**.
4. Press **Left Soft Key** for **Save**.

Making a Call From Recent Calls

1. Press the **SEND Key** to view your most recent 30 dialed, received and missed calls.
2. Place a call by selecting the desired entry and press **SEND** to connect.

CONTACTS

The internal phone book is capable of storing up to 499 contacts with up to 5 numbers and 3 e-mail addresses per entry.

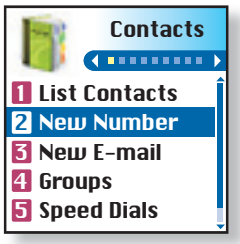

Adding a New Contact Entry

1. From the **Contacts** (**1**) menu, select **New Number** (**2**).
2. Enter the telephone number and press **OK**.
3. Select a label (**Home**, **Home2**, **Office**, **Office2**, **Mobile**, **Mobile2**, **Pager**, **Fax**, **Fax2** or **None**) and press **OK**.
4. Enter a name for the entry and press **OK**.
5. To set a speed dial, highlight **Speed Dial** and press **OK**, or press **Left Soft Key** for **Done**.
6. Add more phone numbers, e-mail addresses or press **Left Soft Key** for **Done**.

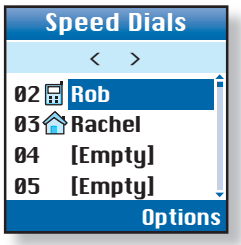

One-Touch Speed Dialing

Enables you to dial 98 of your most frequently used numbers. These numbers are stored in your phone book in memory locations 2 through 99. For locations 2 through 9, you can use one-touch dialing and for locations 10 through 99, you can use two-touch dialing. Press and hold the corresponding key(s) to the memory location to be dialed or press a digit, then press **SEND**.

1. From the **Contacts** (**1**) menu, select **Speed Dials** (**5**).
2. Select or enter a slot number and press **OK**.
3. Select a name from the list using the Navigation Key and press **OK**.
4. Select the desired number and press **OK**.

OTHER NOTABLE SETTINGS

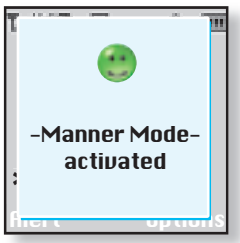

Manner Mode

Use Manner Mode in a public place to disable the ringer and activate Vibrate Mode.

1. From the main screen, activate Manner Mode by pressing the **Manner Mode Key** (for 3 seconds) - the phone will vibrate when activated.
2. When set, "**–Manner Mode– activated**" will appear on the screen.
3. To release Manner Mode, press the key until "**–Normal Mode– activated**" is displayed.

AX4750

DUAL-BAND/TRI-MODE

MENU TREE

CONTACTS (1)
1. List Contacts
2. New Number
3. New E-mail
4. Groups
5. Speed Dials
6. My Contact Info

RECENT CALLS (2)
1. Dialed Calls
2. Received Calls
3. Missed Calls
4. Erase Calls
   - 1. Dialed Calls
   - 2. Received Calls
   - 3. Missed Calls
   - 4. All Calls
5. Call Timer
   - 1. Last Call
   - 2. Home Calls
   - 3. Roam Calls
   - 4. All Calls
6. KB Counter
   - 1. Received
   - 2. Transmitted
   - 3. Total

MESSAGES (3)
1. Voice Mail
2. New Message
3. Inbox
4. Outbox
5. Saved
6. Msg Settings
   - 1. Auto Save
   - 2. Auto Erase
   - 3. Callback #
   - 4. Signature
   - 5. Voice Mail #
   - 6. Auto View
   - 7. Entry Mode
   - 8. Quick-Text
   - 9. Auto Play
7. Erase All
   - 1. Inbox
   - 2. Outbox
   - 3. Saved
   - 4. All

TOUCH2TALK (4)
1. T2T Contacts
2. New Contact
3. New Group
4. Recent T2T
5. T2T Settings
   - 1. My Availability
   - 2. My Name

AXCESS APPS (5)
1. Axcess Apps
2. Axcess Info

MOBILE WEB (6)
1. Start Browser
2. Web Messages
3. Web Alerts

MEDIA (7)
1. Images
2. Sounds
3. Msg Objects
   - 1. Small Pictures
   - 2. Large Pictures
   - 3. My Pictures
   - 4. Sounds
   - 5. My Melodies
   - 6. Animations
   - 7. My Animations

TOOLS (8)
1. Schedule
2. Alarm Clock
   - 1. Alarm 1
   - 2. Alarm 2
   - 3. Alarm 3
   - 4. Quick Alarm
3. Voice Memo
4. My Shortcut
5. Notepad
6. Ez Tip Calc
7. Calculator
8. World Clock

SETTINGS (9)
1. Sounds
   - 1. Ringers
   - 2. DTMF Tone
   - 3. Volume
   - 4. Message Alerts
   - 5. Service Alerts
   - 6. Power On/Off Tone
   - 7. DTMF Length
2. Display
   - 1. Banner
   - 2. Backlight
   - 3. Screens
   - 4. Menu Style
   - 5. Clocks
   - 6. Theme Colors
   - 7. Contrast
   - 8. Fonts
   - 9. Language
   - 0. Power Saver
   - *. Status Light
3. System
   - 1. Select System
   - 2. Set NAM
   - 3. Auto NAM
   - 4. Serving System
4. Security
   - 1. Lock Phone
   - 2. Restrict Calls
   - 3. Emergency #s
   - 4. Change Code
   - 5. Erase Contacts
   - 6. Reset Default
5. Call Setup
   - 1. Auto Retry
   - 2. Answer Call
   - 3. Auto Answer
   - 4. One-Touch Dial
   - 5. Voice Privacy
   - 6. Auto Volume
   - 7. TTY Mode
6. Data Settings
   - 1. Data/Fax
   - 2. Select Port
   - 3. Port Speed
   - 4. Mode(1X/QNC)
   - 5. PAP ID
   - 6. PAP Password
7. Voice Services
   - 1. Voice Commands
   - 2. Sound Modes
   - 3. Announce Alerts
   - 4. Best Match
   - 5. Train Words
   - 6. Help
8. Location
9. Phone Info
   - 1. My Phone Number
   - 2. S/W Version
   - 3. Icon Glossary
   - 4. Shortcut Help

Life's Good

LG Electronics MobileComm U.S.A., Inc. | 10225 Willow Creek Road, San Diego, CA 92131-1639
Customer Service: 800-793-8896 | Accessories: 800-851-6734 | **www.LGUSA.com**

All materials in this training manual including, without limitation, the design, the text, and any marks are the property of LG Electronics, Inc. ALL RIGHTS RESERVED Copyright © 2005 LG Electronics, Inc. All product and service marks contained herein that are not LG Electronics, Inc. proprietary marks are the trademarks of their respective owners. LG Electronics, Inc. makes no claim to such properties. Phone features and specifications are subject to change without prior notice. The use of non-LG approved accessories will void the warranty and may result in damage to the phone, the phone exploding, or other dangerous conditions. Battery talk and standby times are estimates only. Use of certain features and other conditions including, but not limited to, battery age and condition, charging habits, temperatures to which the battery is exposed, and use in digital mode will cause actual standby and talk time to vary. The amount of talk time used will impact the standby time. In the same way, the amount of time that the phone is in standby mode will impact the talk time.

AX4750TM/ALLTEL